


Planning for SWM Architectural Matting System

When planning the installation of a Geggus E-M-S matting system the following points need to be considered.

- ⊕ **Optimum Effectiveness:** The mat sits in a frame set into a well in the floor. How to measure for this frame and well is described on page 31.
- ⊕ **Surface Mounting:** This can easily be achieved with the Top Clean Trend 10 mm and 17mm which can be supplied with a Ramped Edge Frame (please also see page 32).
- ⊕ **Traffic Direction:** The installation of the mat should always be with the aluminium profiles at right angles to the traffic direction.
- ⊕ **Larger Installations:** For entrance mat installations of over 3000 mm, it is recommended that the mat is divided into two or more manageable units.
- ⊕ **Exterior Drainage:** Where an exterior use is planned, the well must be equipped with drainage holes.
- ⊕ **Heavy Usage:** For areas of heavy usage, extreme heavy duty or where trolleys are to be used, the Top Clean Stabil, Top Clean Object or Top Clean High range is built to a heavier gauge and is more suitable to these types of application. See page 22 up to 26.
- ⊕ **Special Shapes:** For special shapes it is recommended that a template be produced in a suitably stable material. The red lines indicate the type of shape where additional charges are incurred (see page 34).
- ⊕ **Inside:** For an inside installation, any combination of Geggus E-M-S can be used but Top Clean Trend Ribbed Carpet, Top Clean Stabil Ribbed Carpet and Top Clean Object Ribbed Carpet is recommended.
- ⊕ **Transitional Areas:** At a transitional or intermediate location Top Clean Light, Top Clean Trend and Top Clean Stabil are suitable in any combination but Ribbed Carpet with a Scraper Bar or Ribbed Carpet with Cassette Brush are particularly recommended.
- ⊕ **Outside:** For outside use any of the Top Clean Stabil or Top Clean Trend systems except those with ribbed carpet can be used but the Grooved Rubber, Grooved Rubber with Brush Strip or Grooved Rubber with Cassette Brush provide the most effective dirt and moisture barrier.


Connectors for multipart mats

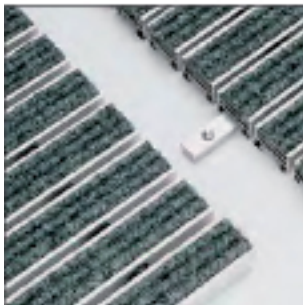

connectors for profile length
– top view



connectors for profile length
– bottom view

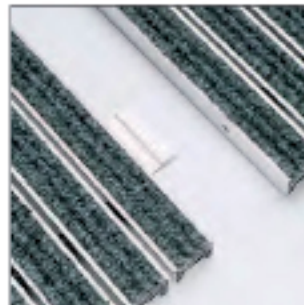

connectors for walking direction
– top view



connectors for walking direction
– bottom view

It is recommended by the manufacturer to share the entrance mats in the walking direction if possible. Examples of correct and wrong dividing:

1. Dividing in the profile length



2. Dividing in the walking direction

